


## Customer Support Services PARTS MANUAL


OPERATION MANUAL	M051-00K63-A064
SERVICE MANUAL	M051-00K63-B012
POWER SUPPLY: 12V; 4.5A	118E-00001-0161
Without Line Cord	
LINE CORD: DOM. 10A 125V	0017-00003-0704
LINE CORD: CON 10A 250V	0017-00003-0691
LINE CORD: 10A; U.K.	0017-00003-0889
LINE CORD: AUSTRALIA	0017-00003-0918
TOUCH UP PAINT:	
SPRAY CAN	0017-00008-0204
.5 OZ BOTTLE W/APPLICATOR	0017-00008-0205
.33 OZ PEN	0017-00008-0206
HARDWARE KIT	GK63-00002-0056


	Page
CONSOLE ASSEMBLY	4
ALTERNATOR W/PULLEY	5
CRANKSHAFT AND BEARING ASSEMBLY	6
INTERMEDIATE SHAFT AND BEARING ASSEMBLY	7
SEAT LATCH ASSEMBLY	8
SEAT POST ASSEMBLY	9
SEAT POST SHROUDS	10
IDLER BRACKET ASSEMBLY	11
CONSOLE SUPPORT ASSEMBLY	12
LEFT SIDE SHROUD AND CRANKARM	13
RIGHT SIDE SHROUD AND CRANKARM	14
PCB MOUNTING BRACKET ASSEMBLY	15
FRONT WHEELS	16
RESISTOR ASSEMBLY	17
HANDLEBAR ASSEMBLY	18
BELTS	19
CABLES	20

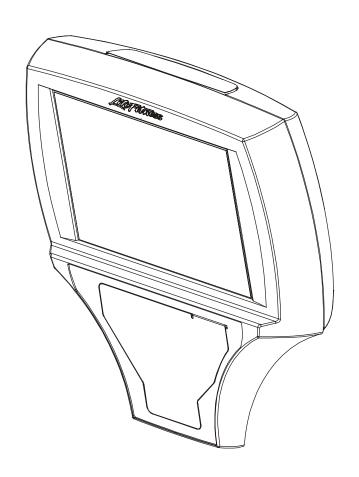


## **CONSOLE ASSEMBLY**

GK63-00002-0045	KIT: SERVICE CONSOLE NTSC ENG
GK63-00002-0046	KIT: SERVICE CONSOLE NTSC SPN
GK63-00002-0047	KIT: SERVICE CONSOLE NTSC JAP
GK63-00002-0048	KIT: SERVICE CONSOLE NTSC FRN
GK63-00002-0049	KIT: SERVICE CONSOLE PAL ENG
GK63-00002-0050	KIT: SERVICE CONSOLE PAL GER
GK63-00002-0051	KIT: SERVICE CONSOLE PAL SPN
GK63-00002-0052	KIT: SERVICE CONSOLE PAL FRN
GK63-00002-0053	KIT: SERVICE CONSOLE PAL ITL

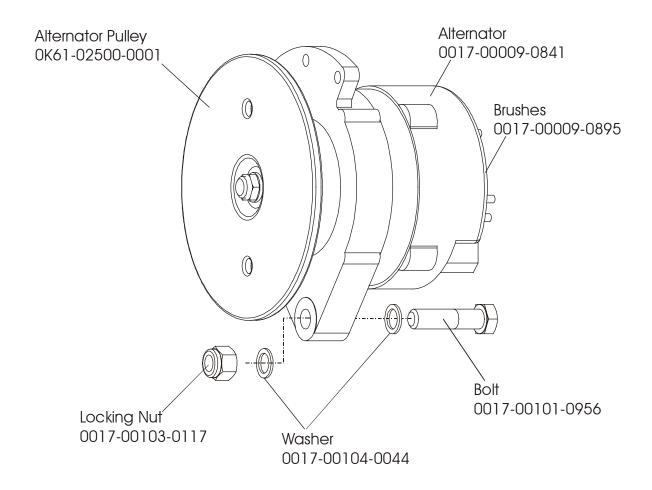


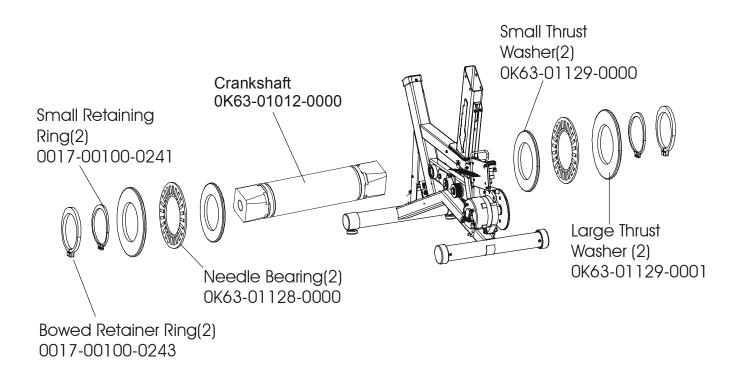



Crank Shaft & Bearing Kit - GK63-00002-0006 (All items on this page are included in the kit.)

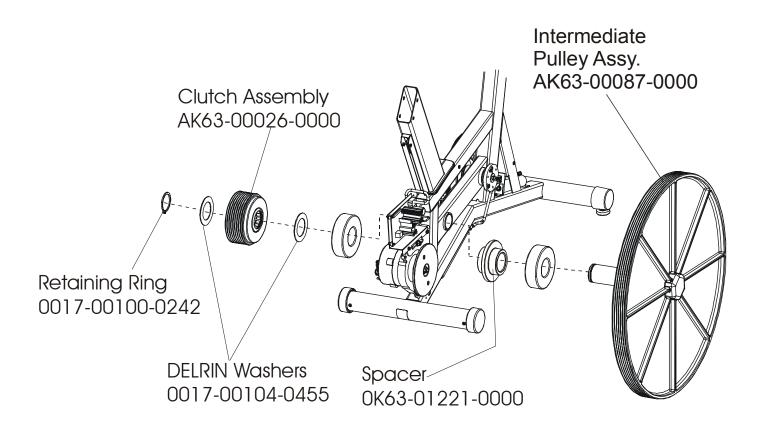



Intermediate Shaft & Bearing Kit - GK63-00002-0007 (All items on this page are included in the kit.)

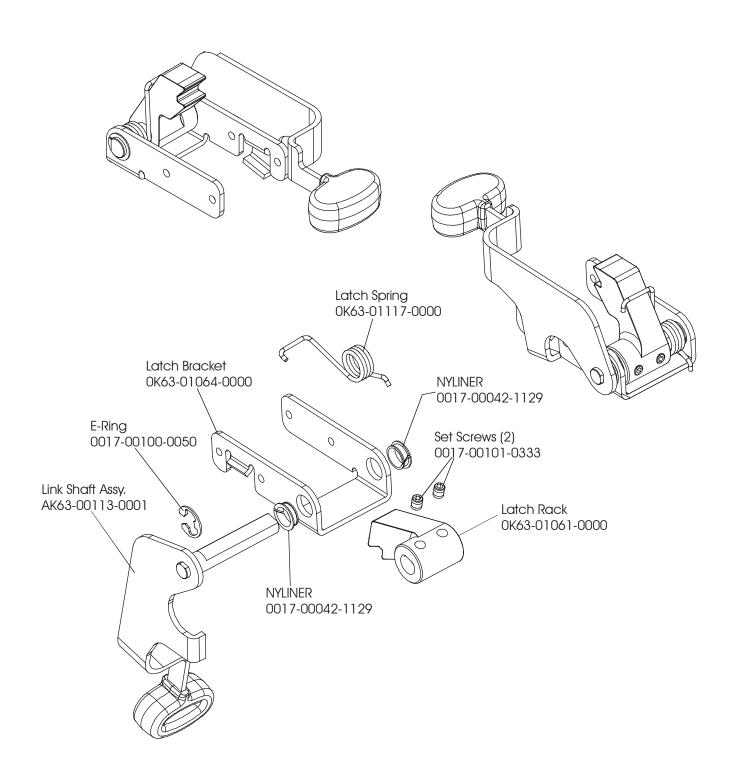


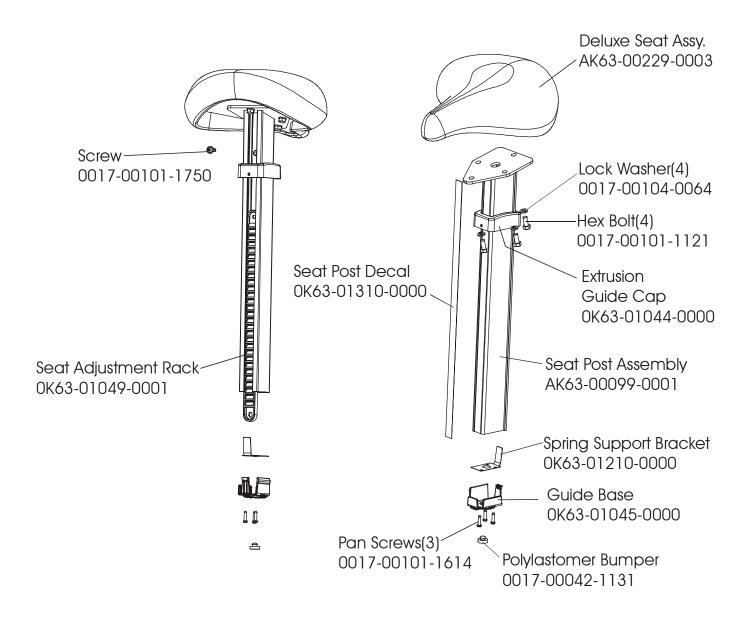


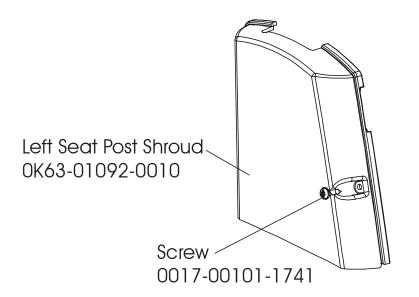


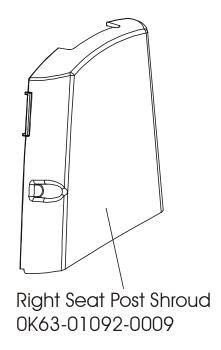


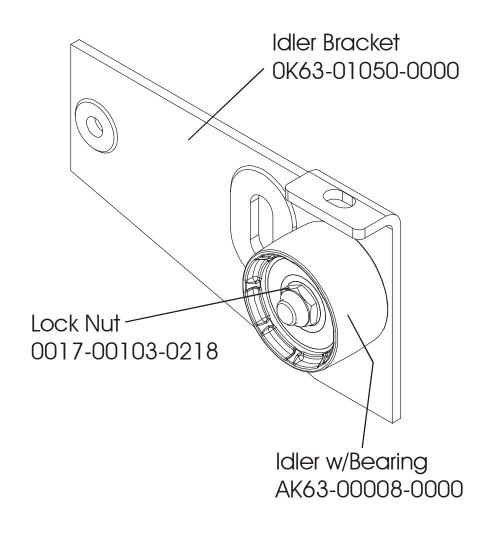


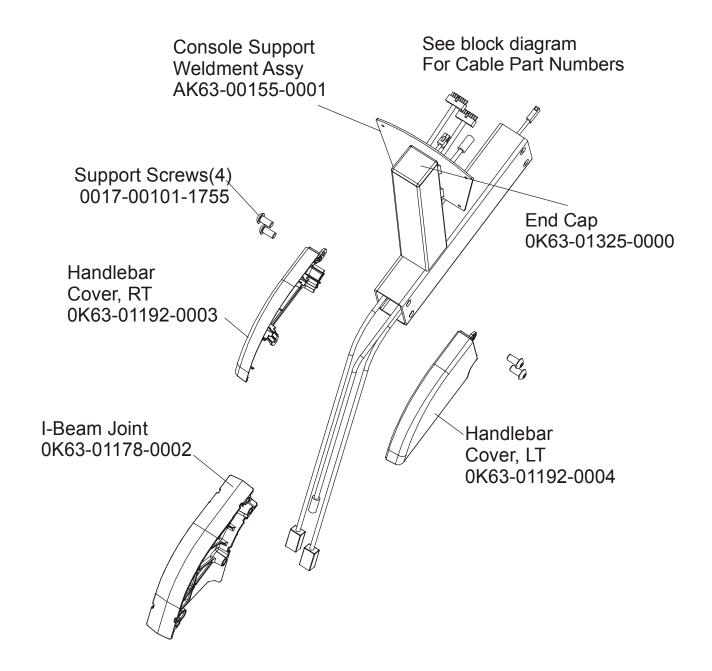

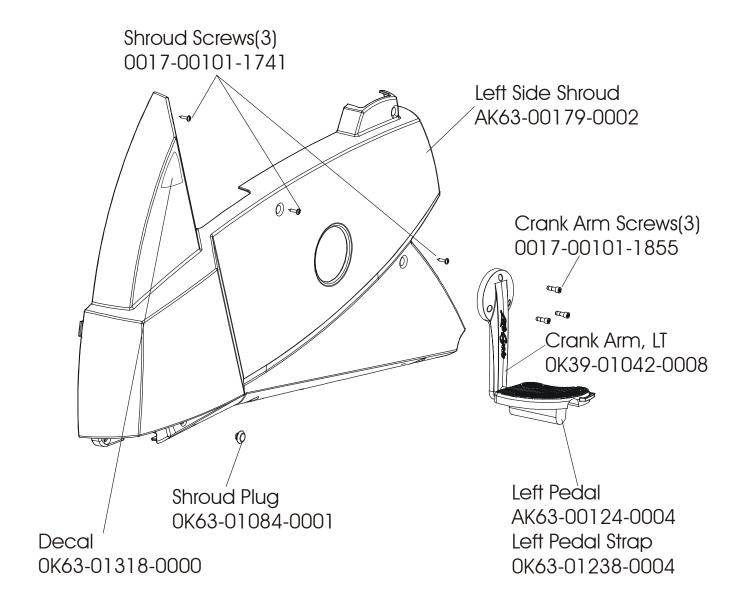

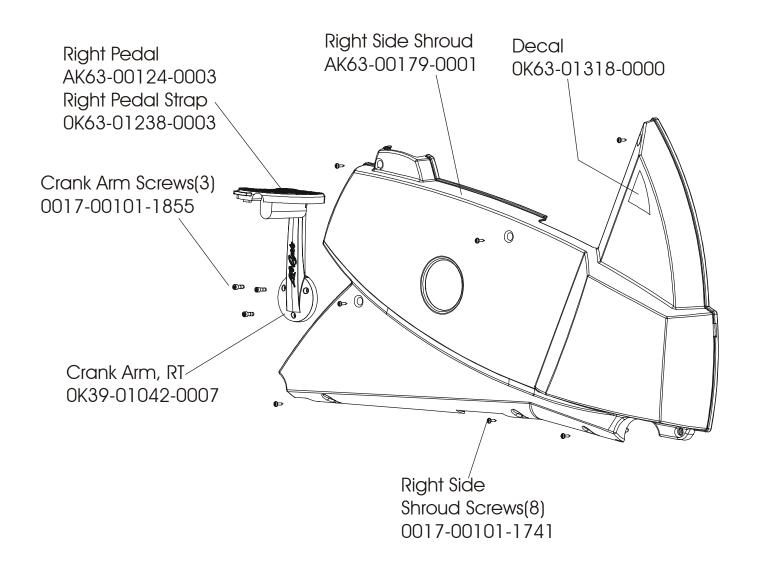

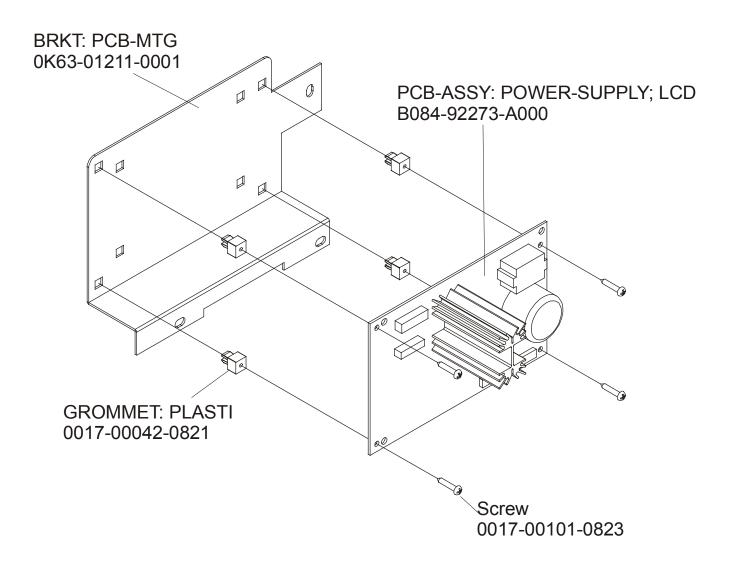

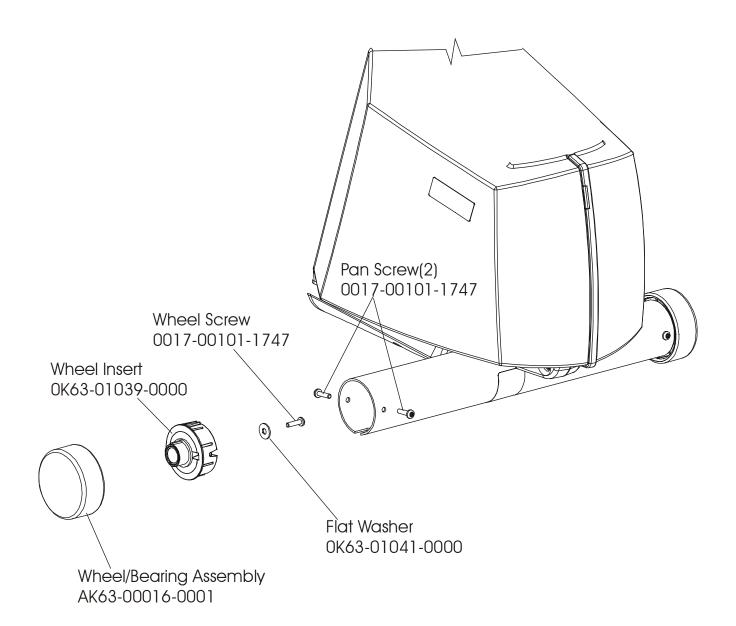

## Resistor Assembly- AK63-00047-0001

